

サンゴーバン

| Item No. |   | Item No.   |   | Item No. |   | Item No.  |   | Item No.    |   | Item No.  |   | Item No. |  |
|----------|---|------------|---|----------|---|-----------|---|-------------|---|-----------|---|----------|--|
| (アンティック) |   | S 114 C    | × | (ストリーキー) |   | (フラッシュ)   |   | (オパール)      |   | TC 182 F  | ○ |          |  |
| M 1 A    | × | S 115 C    | △ | SY 1 G   | △ | S 200LT D | × | OP 02 EE    | 廃 | TY 182 H  | △ |          |  |
| M 2 A    | × | S 116 C    | △ | SY 2 L   | × | S 200MD D | × | OP 04 EE    | 廃 | TC 187 C  | ○ |          |  |
| M 4 A    | × | S 117 A    | △ | SY 4 G   | ○ | S 200DK D | × | OP 05 EE    | 廃 | TC 264 C  | 廃 |          |  |
| M 6 A    | × | S 120 C    | × | SY 5 H   | △ | S 201 E   | × | OP 08 EE    | 廃 |           |   |          |  |
| M 9 A    | × | S 124 C    | × | SY 8 I   | × | S 202 E   | × | OP 09 EE    | 廃 | NEW       |   |          |  |
| M 10 A   | × | S 125 C    | × | SY 9 H   | × | S 203 E   | △ | OP 10 EE    | 廃 | TC 164 EE | ○ |          |  |
| M 13 A   | × | S 126 B    | × | SY 10 H  | × | S 204 E   | △ | OP 11 EE    | 廃 |           |   |          |  |
| M 14 A   | × | S 127 A    | × | SY 11 L  | × | S 205 E   | × | OP 12 EE    | 廃 |           |   |          |  |
| M 16 A   | × | S 129 C    | × | SY 12 L  | × | S 206 E   | ○ | OP 13 EE    | 廃 |           |   |          |  |
| M 17 A   | × | S 132 C    | × | SY 13 I  | × | S 207LT D | × | OP 14 EE    | 廃 | (FLKパターン) |   |          |  |
| M 18 A   | × | S 133 C    | × | SY 14 I  | × | S 207MD D | × | OP 16 EE    | 廃 | FLK 01 A  | ○ |          |  |
| M 21 A   | × | S 135 C    | × | SY 15 H  | × | S 207DK D | × | OP 17 EE    | 廃 | FLK 02 D  | 廃 |          |  |
| S 3 E    | × | S 143 A    | × | SY 16 H  | × | S 208 E   | × | OP 19 EE    | 廃 | FLK 03 D  | ○ |          |  |
| S 5 C    | × | S 144 C    | × | SY 17 I  | × | S 209 E   | △ | OP 21 EE    | 廃 | FLK 04 AA | △ |          |  |
| S 8 C    | × | S 150 C    | × | SY 18 I  | × | S 210 E   | × | OP 181 EE   | 廃 |           |   |          |  |
| S 11 C   | × | S 151 B    | △ | SY 20 I  | × | S 211 E   | × |             |   | (FWパターン)  |   |          |  |
| S 14 A   | × | S 152 A    | × | SY 21 I  | △ | S 212LT E | × |             |   | FW 01 C   | ○ |          |  |
| S 18 A   | × | S 155 C    | × | SY 22 I  | △ | S 212DK E | × |             |   | FH 01 D   | ○ |          |  |
| S 25 A   | × | S 156 B    | × | SY 23 I  | × | S 213 E   | × | (ニューアンティック) |   | FK 01 D   | ○ |          |  |
| S 30 A   | × | S 165 B    | × | SY 24 I  | × | S 214 D   | △ |             |   |           |   |          |  |
| S 31 A   | × | S 166 A    | △ | SY 25 I  | △ | S 215 D   | × | N 001 A     | 廃 |           |   |          |  |
| S 34 C   | △ | S 180 E    | × | SY 26 G  | × | S 216 D   | × | N 009 C     | 廃 | (キャセドラル)  |   |          |  |
| S 39 C   | × | S 181 E    | × | SY 27 L  | × | S 217 D   | × | N 013 A     | 廃 | CX 00 A   | ○ |          |  |
| S 44 A   | × | S 182 E    | × | SY 28 H  | △ | S 218 D   | △ | N 042 A     | 廃 | CX 10 B   | 廃 |          |  |
| S 48 A   | × | S 183 E    | × | SY 29 L  | × | S 219 D   | × | N 062 B     | 廃 | CX 12 B   | 廃 |          |  |
| S 51 B   | × | S 185 E    | × | SY 34 L  | × | S 220 D   | △ | N 122 B     | 廃 | CX 14 C   | 廃 |          |  |
| S 52 C   | × | S 186 E    | × | SY 35 H  | × | S 221 D   | × | N 224 A     | 廃 | CX 17 C   | 廃 |          |  |
| S 53 C   | × | S 261 A    | × | SY 36 G  | × | S 222 J   | × | N 244 A     | ○ | CX 23 C   | 廃 |          |  |
| S 54 C   | × | S 265 A    | × | SY 39 G  | × | S 223 J   | × | N 300 B     | ○ | CX 24 C   | 廃 |          |  |
| S 56 C   | × | S 267 B    | × | SY 41 I  | △ | S 224 K   | × | N 1570 A    | ○ | CX 31 D   | 廃 |          |  |
| S 57 C   | × | S 270 C    | × | SY 42 I  | × | S 226 D   | × | N 2000 A    | ○ | CX 32 D   | 廃 |          |  |
| S 61 B   | × | S 271 C    | × | SY 44 G  | × | S 227 D   | × | N 3315 A    | ○ | CX 34 D   | 廃 |          |  |
| S 62 C   | × |            |   | SY 45 H  | × | S 1176 D  | × |             |   | CX 37 B   | 廃 |          |  |
| S 65 C   | × |            |   | SY 50 I  | × | S 1186 D  | × |             |   | CX 44 B   | 廃 |          |  |
| S 66 C   | × |            |   | SY 51 L  | × | S 1187 D  | △ | (パターンガラス)   |   | CX 47 C   | 廃 |          |  |
| S 68 B   | × |            |   | SY 52 L  | △ | S 1225 D  | × | TC 042 A    | ○ | CX 67 C   | 廃 |          |  |
| S 70 B   | × | (クリアリーミー)  |   | SY 53 I  | × |           |   | TC 043 C    | ○ | CX 71 C   | 廃 |          |  |
| S 71 B   | × | R 1 A      | × | SY 55 I  | × |           |   | TC 046 C    | × |           |   |          |  |
| S 72 C   | × |            |   | SY 56 I  | × |           |   | TY 046 D    | △ |           |   |          |  |
| S 77 A   | × |            |   | S 230 F  | △ |           |   | TC 060 A    | △ |           |   |          |  |
| S 82 A   | × |            |   | S 231 F  | × |           |   | TC 061 E    | × |           |   |          |  |
| S 83 A   | × | (クリアシーディー) |   | S 232 F  | △ |           |   | TC 062 E    | △ |           |   |          |  |
| S 84 A   | × | SB 01 A    | × | S 233 F  | × |           |   | TC 063 G    | × | フローラガラス   |   |          |  |
| S 85 A   | × |            |   | S 234 F  | × |           |   | TC 064 D    | 廃 | F 00 A    | × |          |  |
| S 87 A   | × |            |   | S 235 F  | × |           |   | TC 071 C    | × | F 01 A    | ○ |          |  |
| S 89 B   | × |            |   | S 236 F  | × |           |   | TY 071 D    | ○ | F 02 B    | ○ |          |  |
| S 90 C   | × |            |   | S 237 F  | △ |           |   | TC 072 C    | △ | F 03 B    | ○ |          |  |
| S 93 C   | × |            |   | S 238 F  | × | (クラックル)   |   | TC 076 G    | △ | F 04 B    | ○ |          |  |
| S 95 C   | × | (オパック)     |   | S 239 F  | △ | CR 1 A    | × | TC 080 D    | △ |           |   |          |  |
| S 97 C   | × | OPK 4 F    | × | S 661 F  | × | CR 3 A    | × | TC 089 C    | 廃 |           |   |          |  |
| S 98 A   | × | OPK 5 F    | × | B 1182 F | × | CR 5 A    | × | TC 097 D    | △ |           |   |          |  |
| S 100 A  | × | OPK 8 F    | × | S 4055 F | × | CR 7 A    | × | TC 101 A    | △ | ガラスファブリック |   |          |  |
| S 103 C  | × | OPK 9 F    | × | BF 06 I  | × | CR 8 A    | × | TC 113 G    | ○ | ランパーツガラス  |   |          |  |
| S 104 C  | × | OPK 14 F   | × | BF 12 I  | × | CR 9 A    | × | TC 115 G    | × |           |   |          |  |
| S 105 C  | × | OPK 21 F   | × | BF 13 I  | × | CR 10 A   | × | TC 121 E    | ○ | GAL 001 B | × |          |  |
| S 106 A  | × | OPK 339 F  | × | BF 18 I  | × | CR 11 A   | × | TC 155 A    | ○ | GAL 002 A | 廃 |          |  |
| S 107 C  | × |            |   | BF 20 I  | × | CR 13 A   | × | TC 157 C    | 廃 | GAL 003 C | △ |          |  |
| S 108 C  | × |            |   | BF 152 L | × | CR 14 A   | × | TC 159 A    | △ | GAL 004 E | ○ |          |  |
| S 109 C  | × |            |   |          |   | CR 21 A   | × | TB 178 D    | ○ | GAL 005 D | 廃 |          |  |
| S 110 C  | × |            |   |          |   | CR 22 A   | × | TC 178 C    | ○ | GAL 006 D | △ |          |  |
| S 111 C  | × |            |   |          |   | CR 180 G  | × | TA 182 H    | ○ |           |   |          |  |